

Operating and programming instructions

Codelock access system with CL12 code keyboard



Instructions for use

Function	Action (input)	Response
Open door	Enter access code and press # to confirm	- Positive confirmation tone (3 sec.)* - Green LED lights up - The door opener is activated

* If an incorrect code is entered, an error tone (3 beeps) sounds and the red LED lights up for 5 sec. After 3 incorrect entries, the input is blocked for 2 minutes, and the red LED lights up.

Programming (Master Code and up to 10 Access Codes, max. 6 digits)

Function	Action (input)	Response
Start Programming	* 123456 # 123456 = Default Master Code*	- Positive confirmation tone (3 sec.) - Green LED flashes - Programming mode active (for 2 minutes)
Save Access Code	* 0 # 1 # Code # Code # 1 = Storage slot 1 (out of 10)	- High-pitched tone - Code saved (add more codes in slots 2 to 10)
End Programming	* 9 #	- High-pitched tone - Green LED turns off - Programming mode inactive

Programming example for Access Code: * **123456 # * 0 # 1 # 8910 # 8910 # * 9 #**
The code to open the door is **8910 #**

* For security reasons, the factory default Master Code should be changed after set-up is complete and then stored in a secure location.

List of codes

Property:

	No	Code	Function / description	Date	Visa
Master Code		123456	Factory setting		
<i>changed</i>					
<i>changed</i>					

Access codes

	1				
	2				
	3				
	4				
	5				
	6				
	7				
	8				
	9				
	10				

René Koch AG
Seestrasse 241
8804 Au/Wädenswil
044 782 6000

info@kochag.ch
www.kochag.ch



sehen hören sprechen
voir entendre parler