


Indoor intercom station TC60

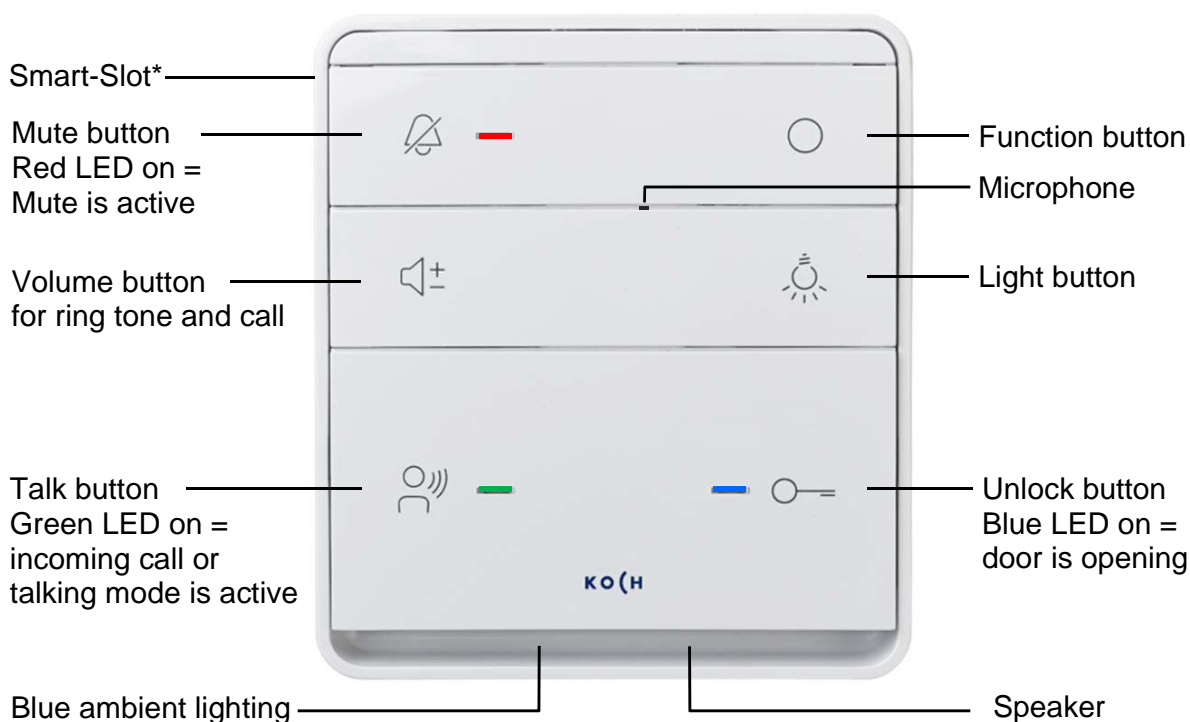

*Smart-Slot = additional radio transmitter for remote radio gong

Ring tones

Ringtones sound different for calls from the entrance, the landing door or for an internal call. The green LED lights up for 1 minute when there is a call by one of these sources.

Instructions for use

- | | |
|------------------------------------|--|
| Answer a call | <ul style="list-style-type: none">• Press the <i>talk button</i> briefly; you now can talk without the need for any further action (hands-free)• If the talk button is pressed for more than 1 sec. the unit switches to <i>Press-to-talk</i> mode (useful when surrounding noise is disturbing): press talk button > talk / release talk button > listen |
| End a call | <ul style="list-style-type: none">• Press the <i>talk button</i> briefly. Talk mode also turns off automatically after 60 sec. or 4 sec. after the <i>unlock button</i> has been pressed. |
| Unlock the door | <ul style="list-style-type: none">• Briefly press the <i>unlock button</i> |
| Turn on/off the door call | <ul style="list-style-type: none">• Press the <i>mute button</i> briefly: red LED on = door call off |
| Turn on the light | <ul style="list-style-type: none">• Press the <i>light button</i> |
| Control function 8 (Setup default) | <ul style="list-style-type: none">• Press the <i>function button</i> |

Settings

Programming the ring tones

1.) Switch on programming mode

- Press the *mute button* for approx. 8 sec until you hear a brief beep
- all the LEDs will light up

2.) Select ring tone

- Select the ring tone by pressing the corresponding *Ring Tone Control button* (see below) until you hear the one you require (the unit stores the last ring tone to be selected)

Ring Tone Control buttons:

Unlock button

Talk button

Light button

Function button

- Ring tone setting for the entrance door 1 (AS 0)
- Ring tone setting for the entrance door 2 (AS 1-63)
- Ring tone setting for the landing door
- Ring tone setting for an internal call

Note

- The ring-tones can be set in succession once the programming mode has been activated

3.) End programming mode

- The programming mode switches off automatically after 8 seconds of no activity
- A beep sounds; the LEDs go out

Setting the volume

Call volume

- during a call, press the *volume button* repeatedly to select the required volume for talking (default: level 3 of 4)

Ring tone volume

- in idle mode, press the *volume button* repeatedly to select the required volume for ring tone (default: level 3 of 4)

Blue ambient light

- press the *light button* for 4 seconds to activate/deactivate

Additional functions

to be programmed by your electrician, e.g.:

- *parallel operation of several indoor intercom station*
- *blocking the ring tone selection*
- *internal conversation, call forwarding, door opener, etc.*

Care

Clean the intercom unit with a dry or slightly damp cloth.
Use a household detergent to remove more stubborn stains.

- **Prevent any water from entering the unit!**
- **Do not use any sharp or abrasive cleaning agents!**

Subject to technical changes