




Contents	Page
Overview of the device	2
General information	2
Setting the display and call volume	3
Setting the ring tone (volume and choice of ring tone)	4
Care	4

User manual

Overview of the device

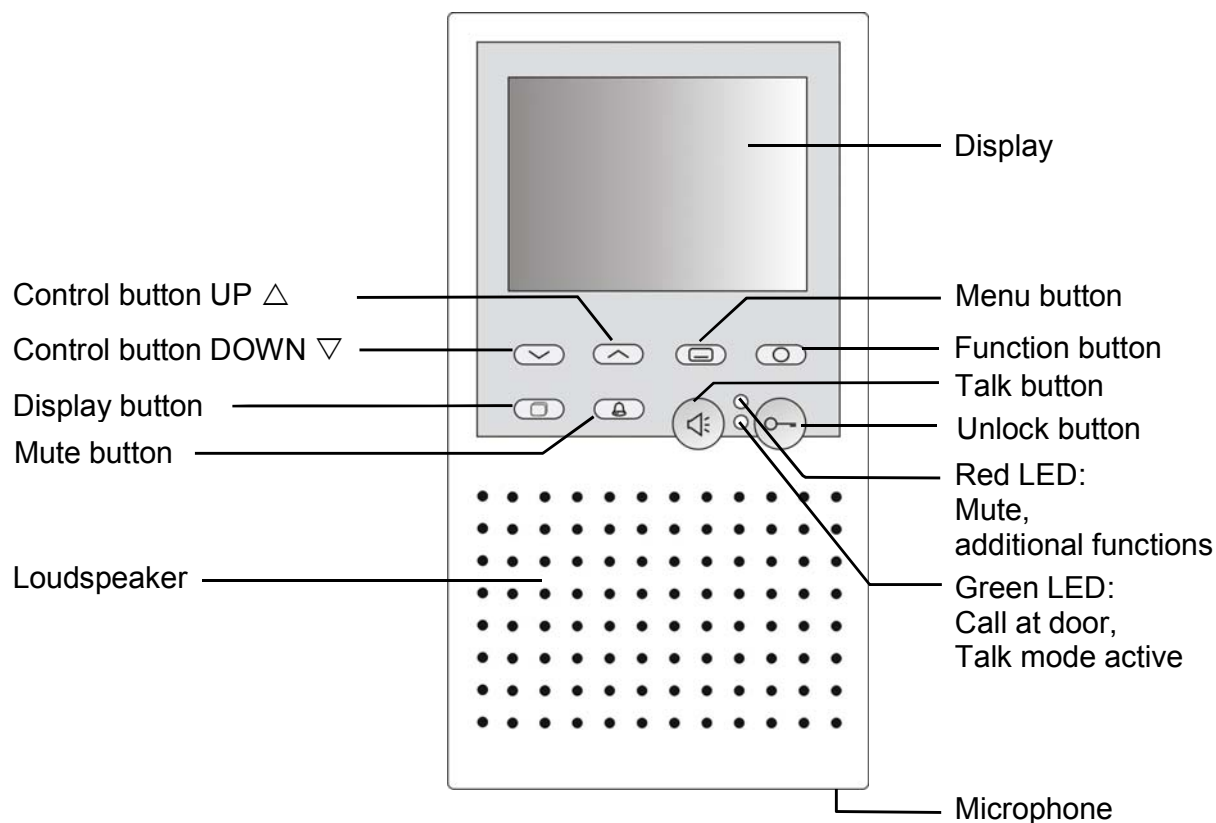

General information

- | | |
|-------------------------|---|
| Answer a call | <ul style="list-style-type: none"> • Press the Talk button briefly; you can now talk without the need for any further action.
If the Talk button is pressed for longer than 1 sec., the device switches to Push-to-talk mode:
Press the button: To talk to the external intercom station (resident)
Release the button: To talk to the indoor intercom station (visitor) |
| End a call after | <ul style="list-style-type: none"> • Press the Talk button briefly or the unit switches off automatically 120 sec. or 4 sec. after the Unlock or Talk button has been pressed. |
| Unlock the door | <ul style="list-style-type: none"> • Briefly press the Unlock button |
| Switch on image display | <ul style="list-style-type: none"> • Press the Display button. The display appears automatically when there is a call at the door. It switches off after 80 sec. |
| Turn off door ring | <ul style="list-style-type: none"> • Press the Mute button briefly; the red LED lights up |
| Turn on door ring | <ul style="list-style-type: none"> • Press the Mute button briefly; the red LED goes out |
| Ring tone volume | <ul style="list-style-type: none"> • see page 4 |
| Function button ○ | <ul style="list-style-type: none"> • <input checked="" type="checkbox"/> Switching on the light – default setting <input type="checkbox"/> Special function (Control function 8) <input type="checkbox"/> Internal call <input type="checkbox"/> Doormatic <input type="checkbox"/> Call forwarding |

User manual


Setting the display and call volume


Display settings:







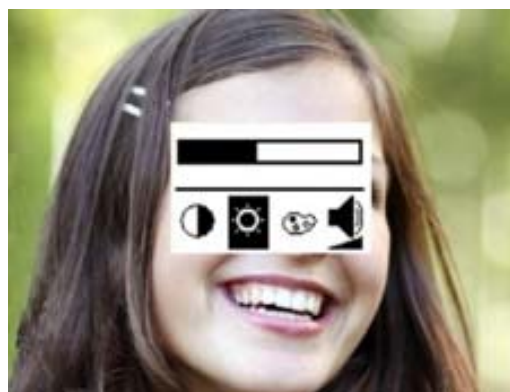

1. When in idle mode briefly press the **Display button**.
The video image appears on the monitor.
2. Press the **Menu button** briefly. The menu for the display setting appears.
3. Adjust the values with the **Control buttons UP and DOWN**. Use the **Menu button** to jump to the next position.
4. The Menu either closes automatically after 10 seconds or immediately if you press the **Function button**.



Call volume:

1. Briefly press the **Menu button** during a call. The menu for the display setting / call volume appears.
2. Press the **Menu button** until you see the following symbol  .
3. Adjust the values with the **Control buttons UP and DOWN**.
4. The Menu either closes automatically after 10 seconds or immediately if you press the **Function button**.









Symbols on the display monitor		Parameters	
 05	Image of the camera or external video intercom station no. 05		Contrast
	Ring tone switched off		Brightness
	Call forwarding on		Colour intensity
	Doormatic on		Call volume

User manual

Setting the ring tone (volume and choice of ring tone)

1. When in idle mode briefly press the **Menu button**.
The main menu appears on the monitor screen.
2. Select the required parameter using the **Menu button**.
3. Adjust the value using the **Control buttons UP and DOWN**.
4. The Menu either closes automatically after 10 seconds or immediately if you press the **Function button**.



Parameters in the Ring tone menu			
	Ring tone volume		Ring tone selection for the Landing call
	Ring tone selection for the external station of the AS 0		Ring tone selection for an Internal call
	Ring tone selection for the external station > AS 0		Ring tone selection for sub-ring tones 1, 2, 3, 4 *

* = to differentiate between the different ring tone buttons from the same external station

Care

Clean the Indoor video intercom unit with a dry or slightly damp cloth.
Use a household detergent to remove more stubborn stains.

- **Prevent any water from entering the unit!**
- **Do not use any sharp or abrasive cleaning agents!**

René Koch AG
Seestrasse 241
8804 Au/Wädenswil
044 782 6000
044 782 6001 Fax
info@kochag.ch
www.kochag.ch



sehen hören sprechen
voir entendre parler