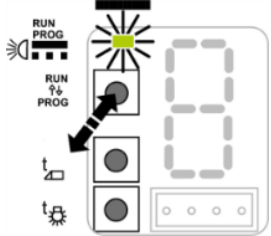


Brief programming instructions

Door intercom TC:Bus with central controller BVS25

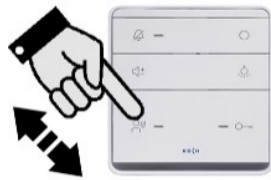
Linking an indoor station to a call button

The serial number of the **indoor station** unit is sent to the outdoor station and linked to the desired call button.


- 

1. Briefly press the PROG button on the BVS25 control unit

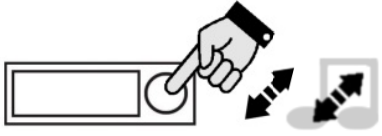
→ the LED and the letter P flashes
→ Programming mode ON
- 2a.** Hands-free **indoor station**: Press talk button briefly



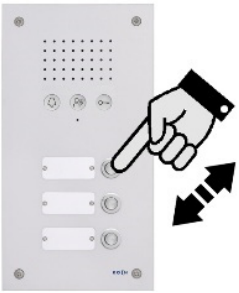
2b. Handset **indoor station**: pick up the handset




2c. Inaccessible indoor station: Briefly press the apartment doorbell twice. (the 2nd time while it is ringing)

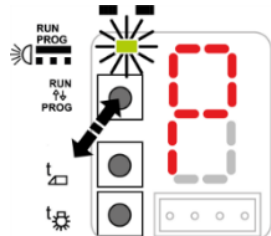

- A confirmation tone is heard on the outdoor station (TCU3/TCU4).
→ While in programming mode communication over the intercom system is still possible.

3. Briefly press the corresponding call button on the outdoor station within 8 seconds.



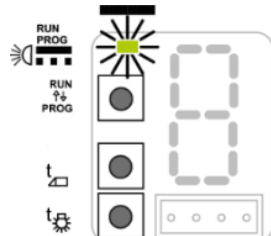
...both the outdoor and indoor station start ringing.



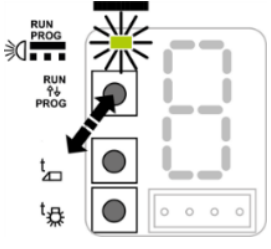
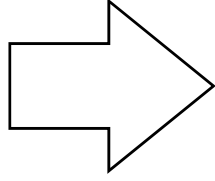
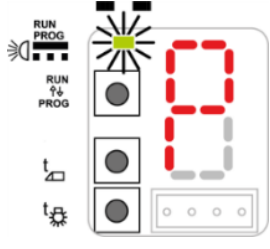
Linking further indoor stations to call buttons: repeat steps **2** and **3** respectively
- 

4. Briefly press the programming button on the BVS25 control unit

→ LED lights up permanently
→ Programming mode OFF

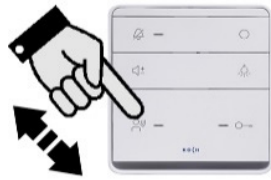



Linking an additional indoor station to a call button that is linked to one already.
 As a result both indoor stations will ring at the same time.

1.   

Briefly press the PROG button on the BVS25 control unit

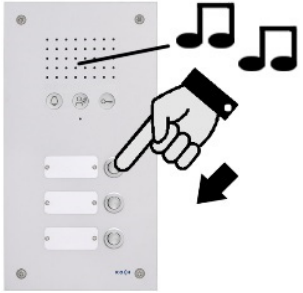

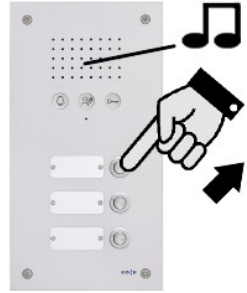
→ the LED and the letter P flashes
 → Programming mode ON

2a.  **2b.** 

Hand-free indoor station: Press talk button briefly

Handset indoor station: pick up the handset

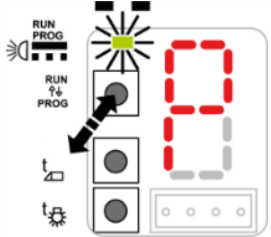
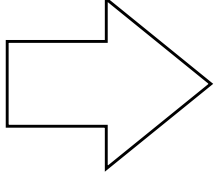
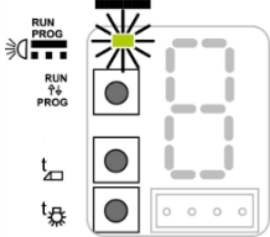
→ A confirmation tone is heard on the external intercom unit (TCU3/TCU4).
 → While in programming mode communication over the intercom system is still possible.

3.   

Press **and hold** the corresponding call button on the outdoor station within 8 seconds - wait 3 rings

As soon as you hear the indoor and outdoor station ring ...

... release the call button immediately.

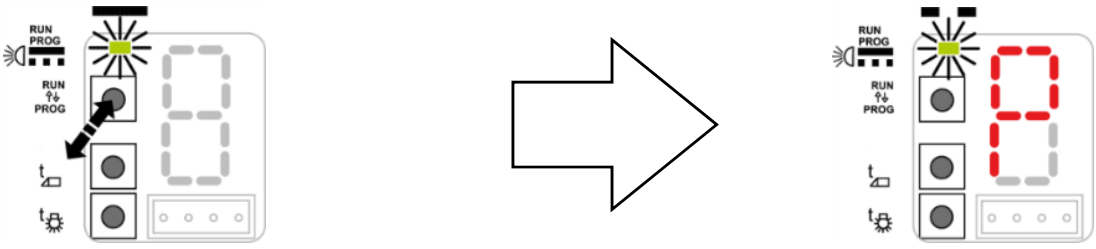
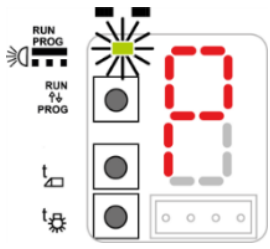
4.   

Briefly press the programming button on the BVS25 control unit

→ LED lights up permanently
 → Programming mode OFF

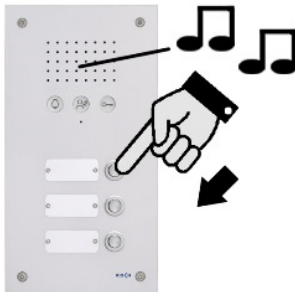
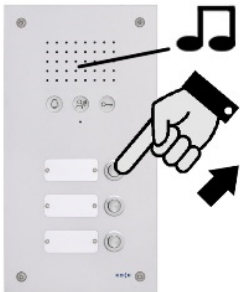
Delete the link between an indoor station and a call button

Before a call button can be linked to a different indoor station, the existing link has to be deleted.

1.  

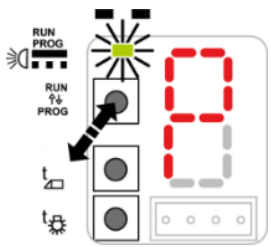
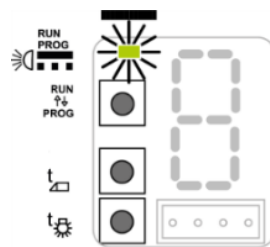
Briefly press the PROG button on the BVS25 control unit

→ the LED and the letter P flashes
→ Programming mode ON

2.  

Press and hold the call button...

... until the second confirmation tone is heard (after approximately 6 seconds)

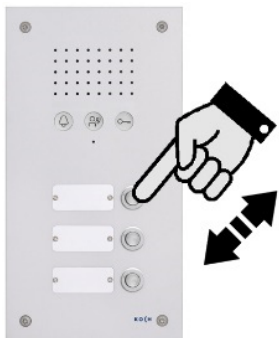

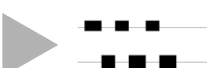

3.  

Briefly press the programming button on the BVS25 control unit

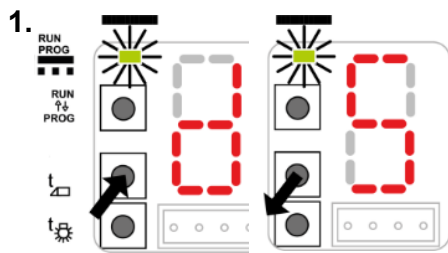
→ LED lights up permanently
→ Programming mode OFF

Determine the programming status of an intercom call button

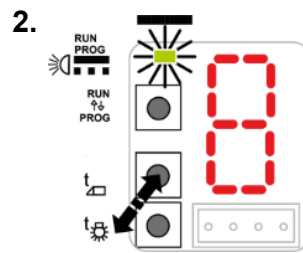
External intercom units are delivered with or without programming.

Testing			
		NoProg-tone (high beep)	Unlinked call button
		Ringing tone	Linked call button
		Error tone (low double beep)	Indoor station not ready for use or faulty programming

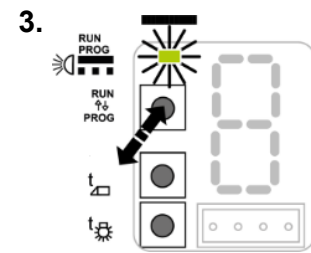
Setting the door opener switching time



Press the d button until the time (number) is displayed.

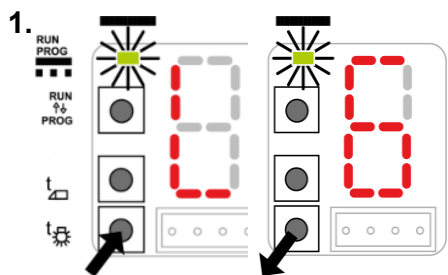


Now press the button repeatedly until the appropriate time is displayed.*

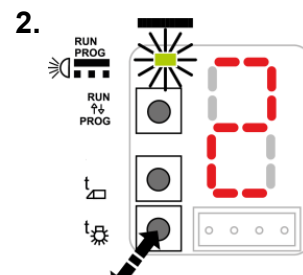


Press the PROG button to save the new time.

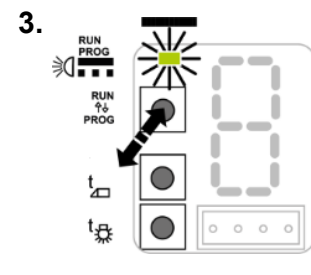
Setting the light switching time



Press the L button until the time (number) is displayed.



Now press the button repeatedly until the appropriate time is displayed.*



Press the PROG button to save the new time.

* Door opener times: 0.5, 1, 2, 3, ...9 seconds (0.5 shown as: 0 ^{pause} 5).

Light switch times: 0.5, 2, 4, 6, 30, 60, 120, 180, 240, 300 (e.g.120 shown as: 1 ^{pause} 2 ^{pause} 0)

If no button is pressed within 10 seconds, the time setting is cancelled.

Service

To frequently asked questions you can find answers at www.kochag.ch **FAQ**
(german or french only)

If you have further questions, please contact
our technical customer service team

Tel 044 782 6000



René Koch AG
Seestrasse 241
8804 Au/Wädenswil
044 782 6000
info@kochag.ch
www.kochag.ch

KOCH

sehen hören sprechen
voir entendre parler